


Das Schaltprogramm gibt nur die Funktionen an

| gedr. Stellg | a-b | b-c | d-e | e-f | g-h | h-i |
|--------------|-----|-----|-----|-----|-----|---------|
| 1 TIEF | | | | 2 | 1 | 2 |
| 2 HOCH | | 2 | | | | |
| 3 AUS | 3 | | | | | |
| 4 TA | 4 | | | | 3 | 3 |
| 5 LW | | 8 | | | 3 | 348 UMK |
| 6 KW | | 8 | | | 3 | 348 U |
| 7 MW | | 8 | | | 3 | 348 UMK |
| 8 UW | 8 | | | | 3 | 34 |

1-2 3-4 4-5 6-7 7-8 9-10 10-11 12-13 13-14 15-16 16-17

Tastatur ← Spulenkasten →

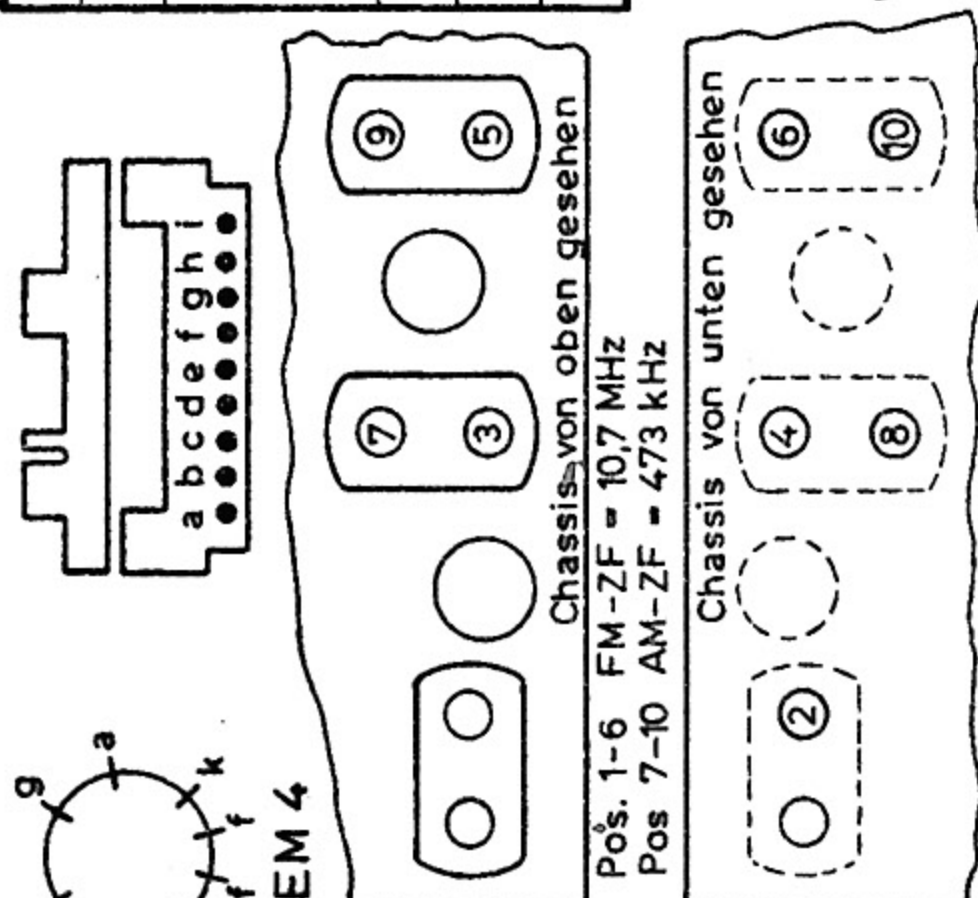

| AM-ZF | L | 473 kHz |
|-------|-----|----------|
| FM-ZF | L C | 10,7 MHz |
| UKW | L C | 98 MHz |
| | L Z | 98 MHz |
| KW | L V | 98 MHz |
| | L C | 6 MHz |
| MW | L C | 550 kHz |
| | L C | 1500 kHz |
| LW | L C | 200 kHz |

- S1 107/20x0,05LS
 - S2 17/015LS } 1/4 W
 - S3 17/015LS } körp
 - S4 20/015LS
 - S5 16/015LS
 - S6 43/015LS
 - S7 49/20x0,05LS
 - S8 165/015LS
 - S9 8/03LS
 - S10 100/20x0,05LS
 - S11 385/0,09LS
 - S12 3/15 vers
 - S13 2/015LS
 - S14 30/015LS
 - S15 4/1,0 vers
 - S16 8/0,3LS
 - S17 89/0,15LS
 - S18 182/015LS
 - S19 6/0,09LS
 - S20 45/0,15LS
 - S21 182/10x0,05LS
 - S22 30/0,15LS
 - S23 182/10x0,05LS
 - S24 5/0,15LS
 - S25 30/0,15LS
 - S26 2/0,15LS
- Dr1 62/0,15LS
 - Dr2 2x33/03LS bif
 - Dr3 48/0,3LS
- Netztrafo: NTr 01
- 0-110V 550/0,4L
 - 127V 635/0,4L
 - 150V 750/0,3L
 - 220V 1100/0,3L
 - 6,3V 35/1,2L
 - 250V 1325/0,2L
- Ausgangstrafo: ATr 04
- Primär: 2x1640/0,15L
 - Sekundär: 95/0,7L + 110/0,15L