


Taste	L	M	K1	K2	UKW	⊙					
Schalter	I	6	4	7	3	8	2	9	5	10	12
L	II	II	I		I	I	I	I	•	I	I
M	I	I	II	•	I	I	I	I	•	I	I
K1	I	I	I		II	II	I	I	•	I	I
K2	I	I	I		I	I	II	II	•	I	I
UKW	I	I	I		I	I	I	I		II	I
⊙	I	I	I		I	I	I	I	•	I	II

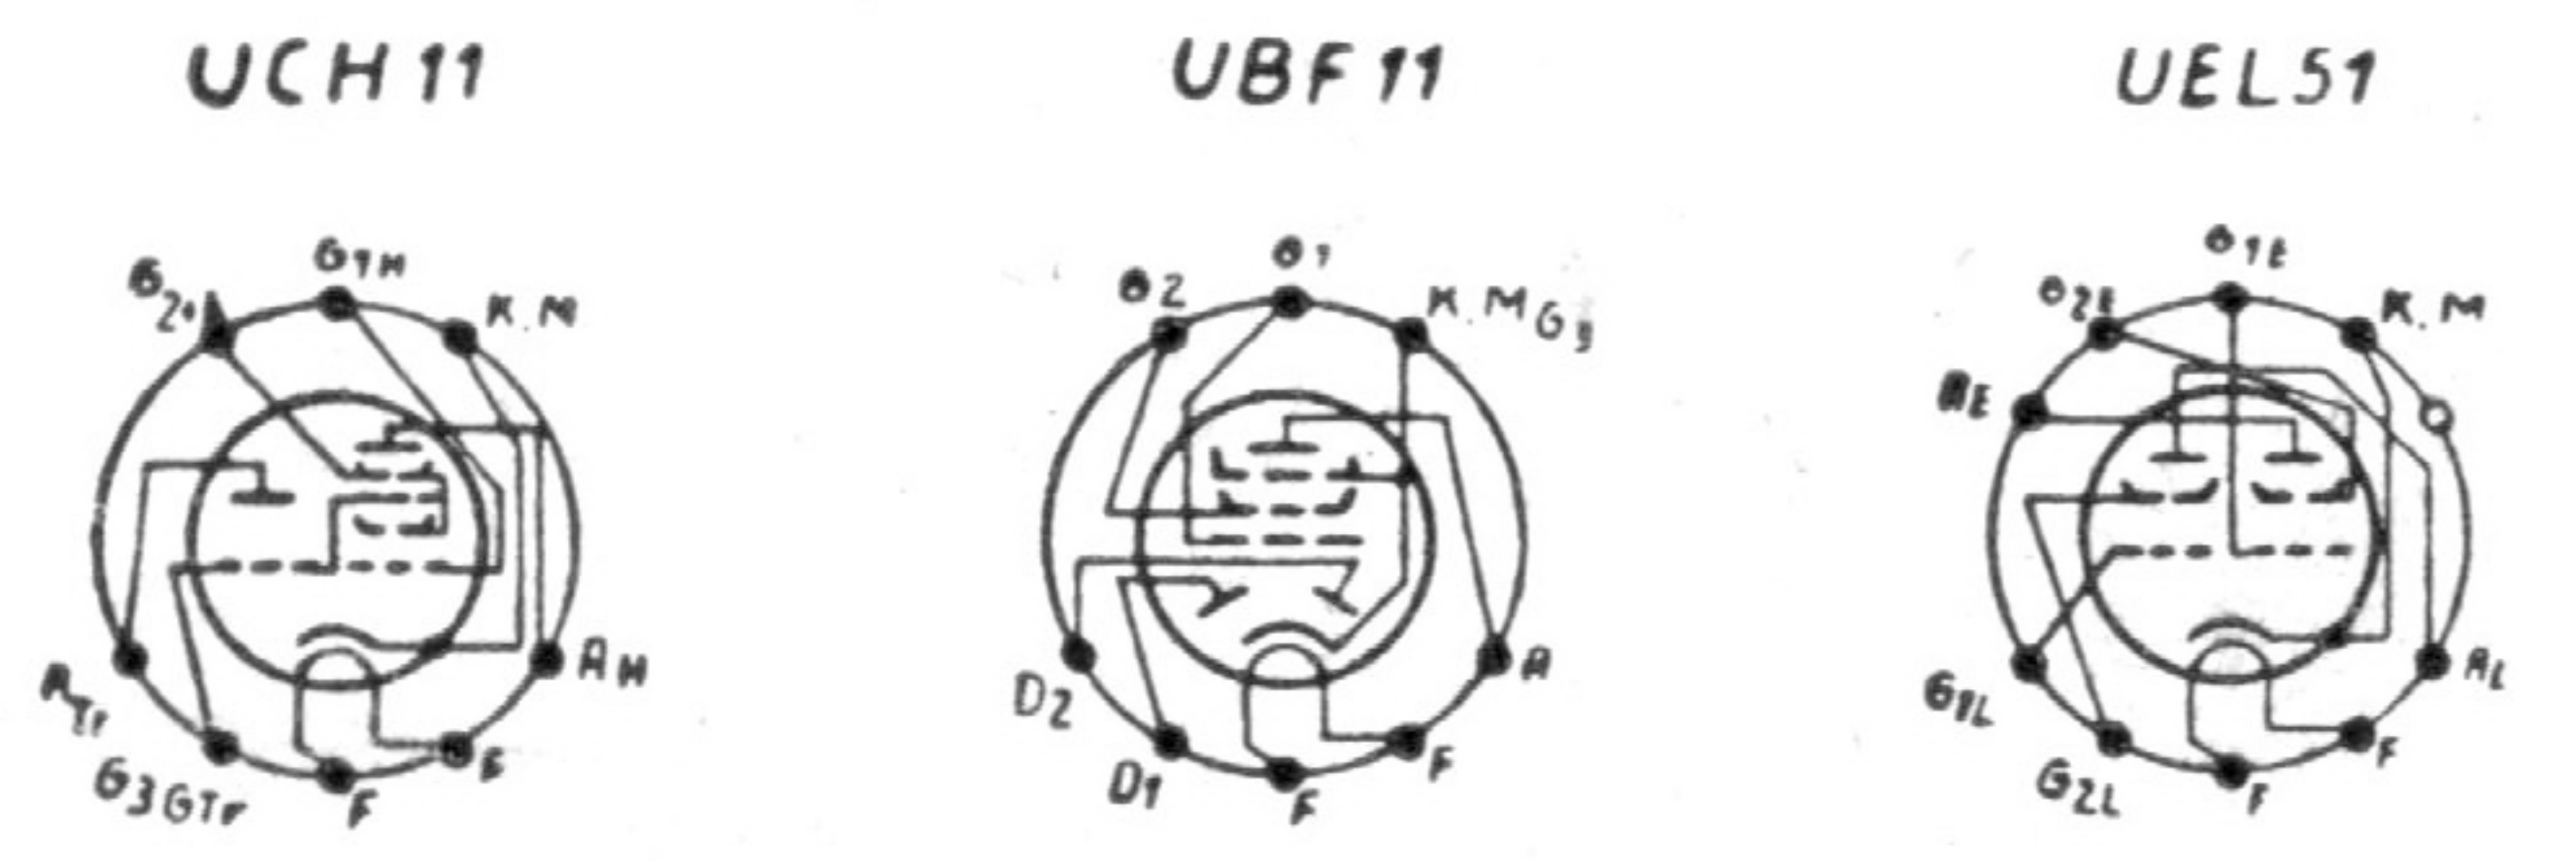

Schaltbild 4U65
 1120.001-02062/1 Sp.
 Ausa. TV